



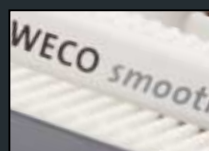


Optical Machinery by WECO  
**Smooth II, I**

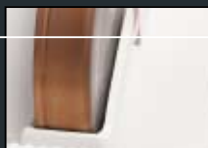

**WECO Smooth II – Ergonomic manual grinding machine with one or two grinding discs.**

The Smooth II is predestined for use in a workshop or at training facilities. It can be optionally equipped with one or two grinding discs for rough grinding, fine grinding, chipping edges and polishing and always offers the optimum solution for your specific requirements due to its diversity.

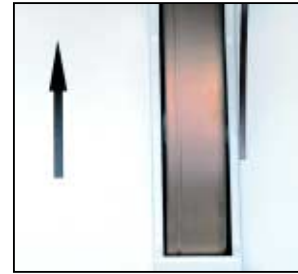

**WECO Smooth I – Traditional manual grinding machine with one grinding disc.**

A diamond disc developed by WECO especially for aftertreatment features the advantages of two discs: one wide flat track, one diamond facette groove and one rounded working edge. This disc allows you to chip edges without any problem or grind flat, tapered and special facettes even if you are processing minus lenses with high dioptries.

- > High grinding performance, because speed and disc construction are optimally harmonised

**Benefit from practical details for more efficient working**

- > User- and maintenance-friendly, as no greasing or lubricating necessary
- > Independent of connection to water supply by integrated easily accessible cooling system

**Two discs requiring with minimum space requirements**

- > Minimum space requirements by low device width
- > Therefore large working areas
- > Large grinding discs (Ø150 mm)
- > Discs with groove and radius

**Working with dry hands**

- > Hand rest beyond the wet area
- > Safety lever with automatic switch ON/OFF function
- > Display of operational status

**Integrated water system**

- > Optimum water supply and quick water outlet
- > Simple water change
- > Optionally with direct water connection
- > Prevents oxidation of high-quality grinding disc, even after longer standstill periods

Disc combinations Manual grinding stones	Smooth II					Smooth I
Grinding disc Combination	1	2	3	4	5	1
Rough grinding disc Width 25 mm			•			
Fine grinding disc with groove Width 25 mm	•	•	•		•	
Extra-fine grinding disc with groove Width 25 mm	•			•		
Diamond polishing disc (silky mat effect) Width 25 mm		•				
Fine grinding disc with groove Width 25 mm						•

Subject to changes within the scope of technical development.

For further information on Smooth and WECO optical machinery please call us.

We would be pleased to inform you.

**WECO Optik GmbH**  
 Administration Jägerstraße 58  
 D-40231 Düsseldorf  
 Tel +49-211-21 04-105  
 Fax +49-211-21 04-251  
 info@weco-instruments.com  
 www.weco-instruments.com

Distributed by: